


NO	Device	Type	
1	Desktop computer	SMPS	it changes AC power into the DC power need by the computer parts.
2	WI-FI Router	SMPS	It gives the router the DC power it need to work.
3	LED monitor	SMPS	It provides the required power to the electronic parts of the monitor
4	Desktop computer	UPS	UPS gives backup power when the main electricity goes off, so the computer does not shut down.
5	WI-FI Router	UPS	UPS can keep the router working for some time when threr is a power cut.

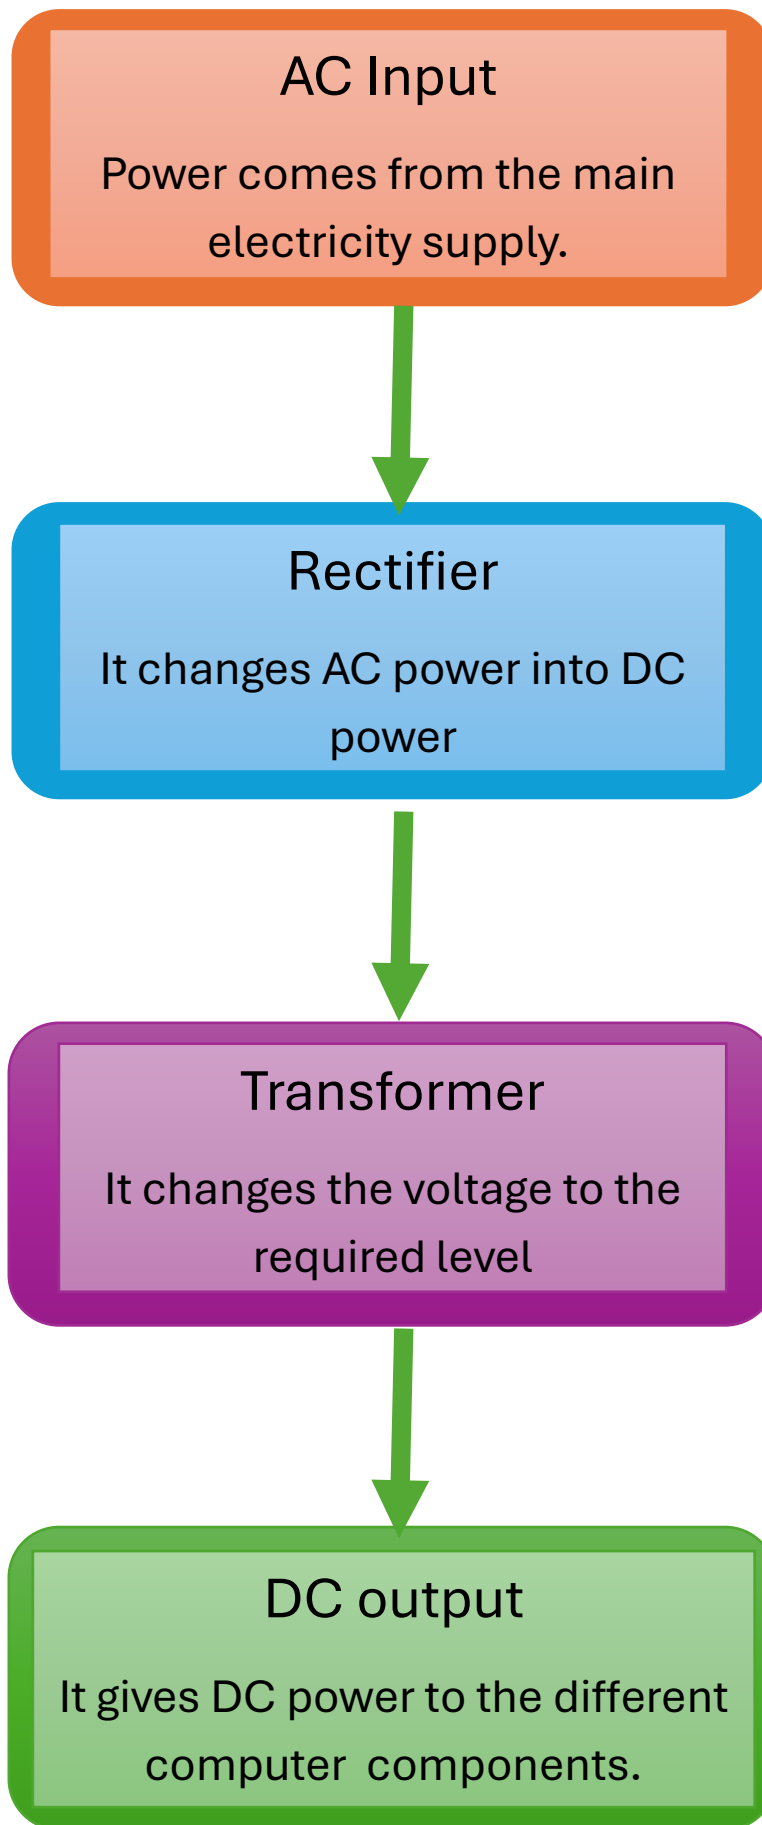

POWER CONNECTORS

1. 24-pin Motherboard Connector

Powers: Motherboard

Safety Tip: Turn off the PC and unplug it before connecting or removing the cable.

2. SATA Power Connector

Powers: H.D.D and SATA S.S.D

Safety Tip: Connect it in the correct direction and do not force it.

3. Molex Connector

Powers: Older H.D.D, DVD drives and some other PC devices.

Safety Tip: Turn off and unplug the PC before connecting or removing it.

4. PCIe 6/8/16-pin Connector

Powers: Graphics card (GPU)

Safety Tip: Use the correct PCIe cable and make sure it is properly connected.

GAMING PC SETUP

Step 1: First, switch off the S.M.P.S and unplug the power cable.

Step 2: Connect the **24-pin cable** from the S.M.P.S to the motherboard.

Step 3: Connect the **CPU 4/8-pin cable** to the CPU power connector on the motherboard.

Step 4: If the graphics card needs extra power, connect the **PCIe 6/8-pin cable** from the S.M.P.S to the GPU.

Step 5: For a SATA H.D.D or S.S.D, connect the **SATA power cable** from the S.M.P.S to the storage drive.

Step 6: Check all the connections properly and make sure no cable is loose.

Step 7: After checking everything, connect the main power cable and turn on the PC.